


PRINTING AND FITTING SPECIFICATIONS

- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm
3.9in

10cm / 3.9in

SCALE EXAMPLE OF FINAL TEMPLATE

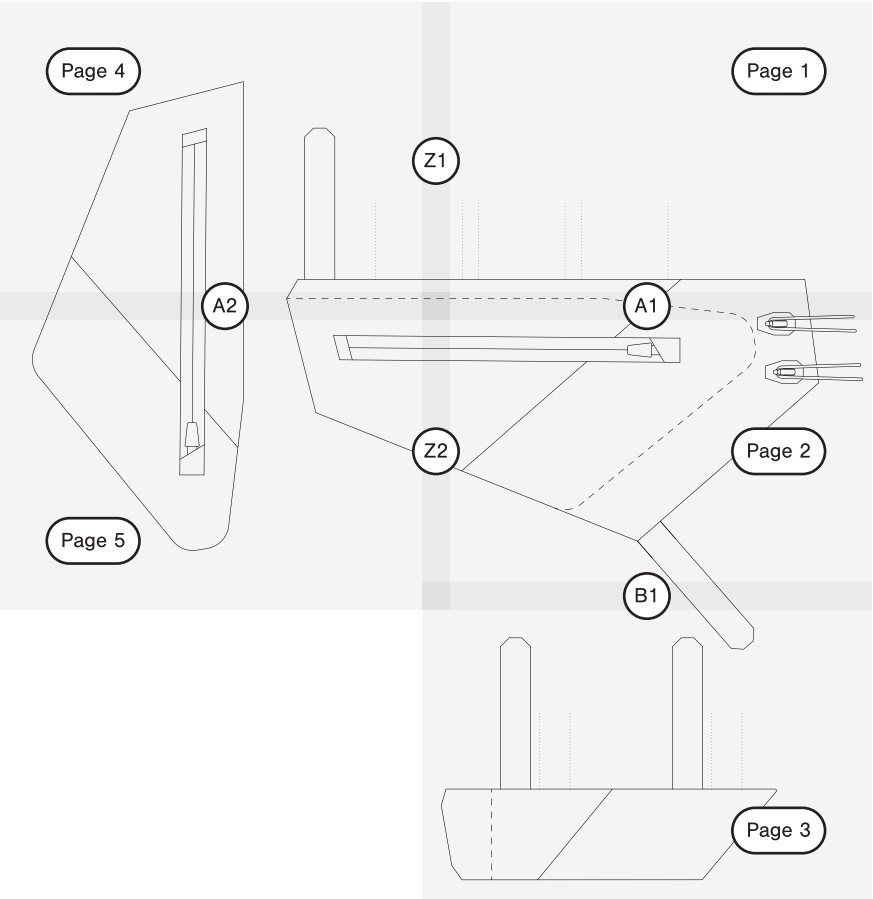


X Z1


Alternative placement span
for Hypalon load strap

Alternative placement span
for Hypalon load strap

Alternative placement span
for Hypalon load strap

X

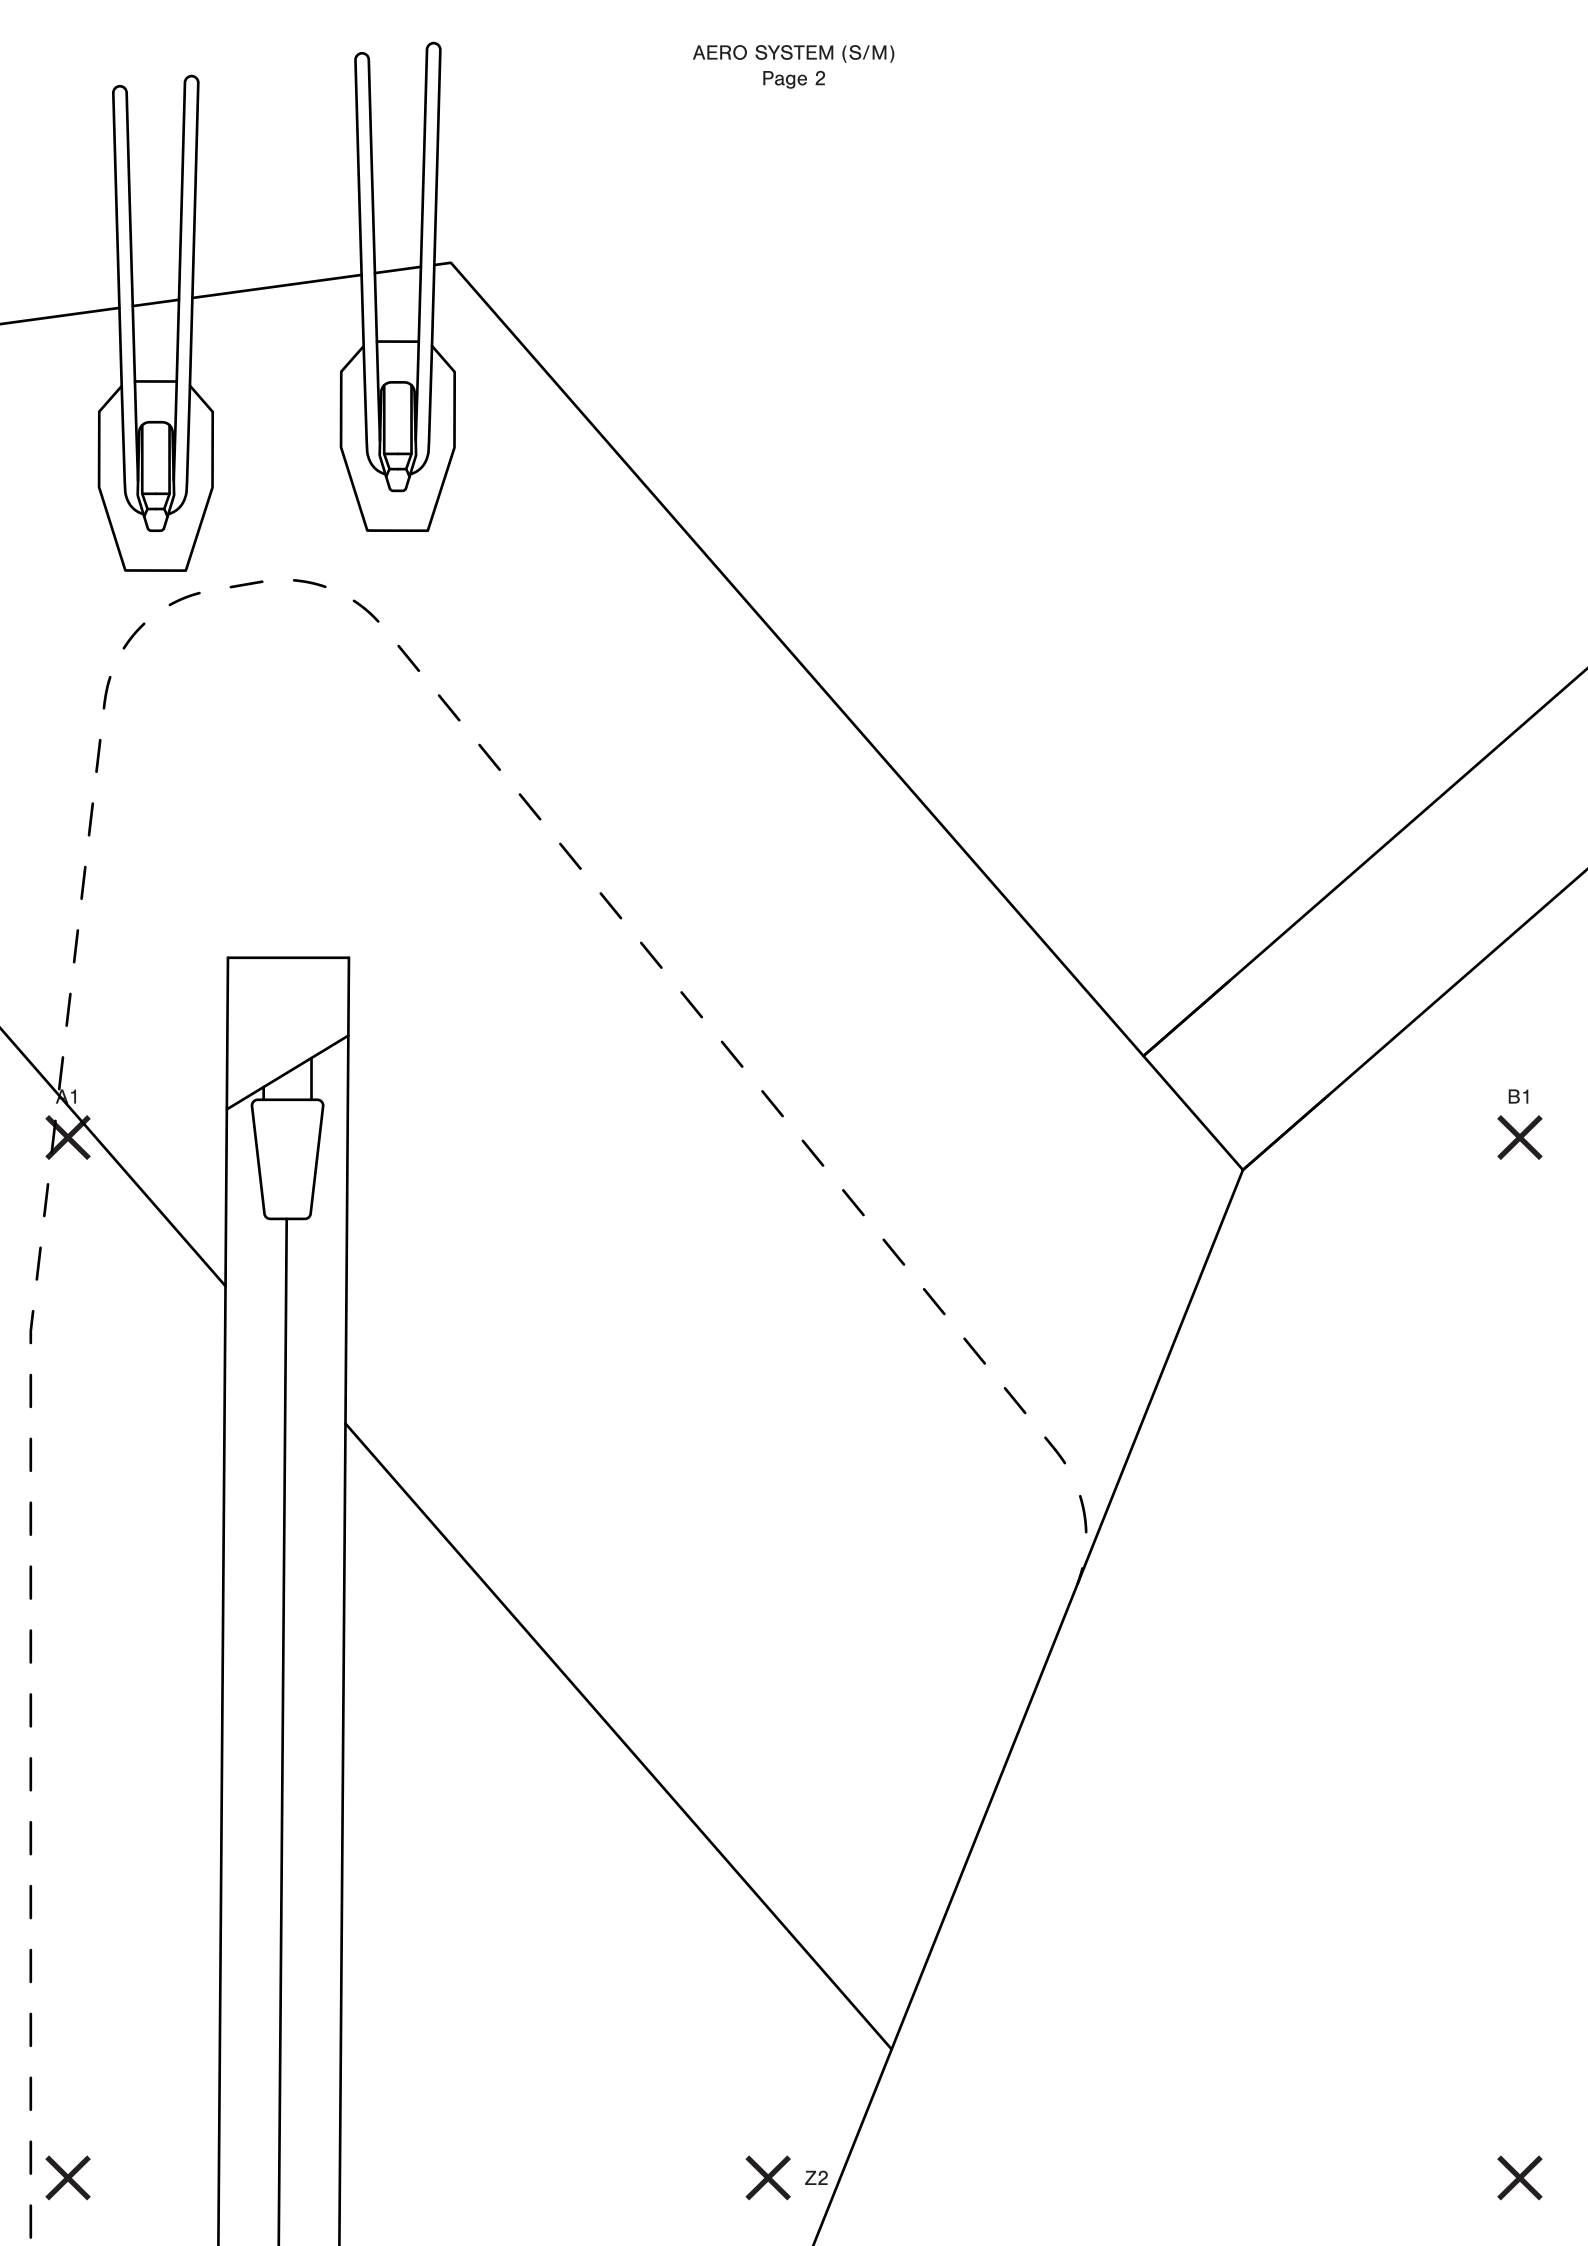

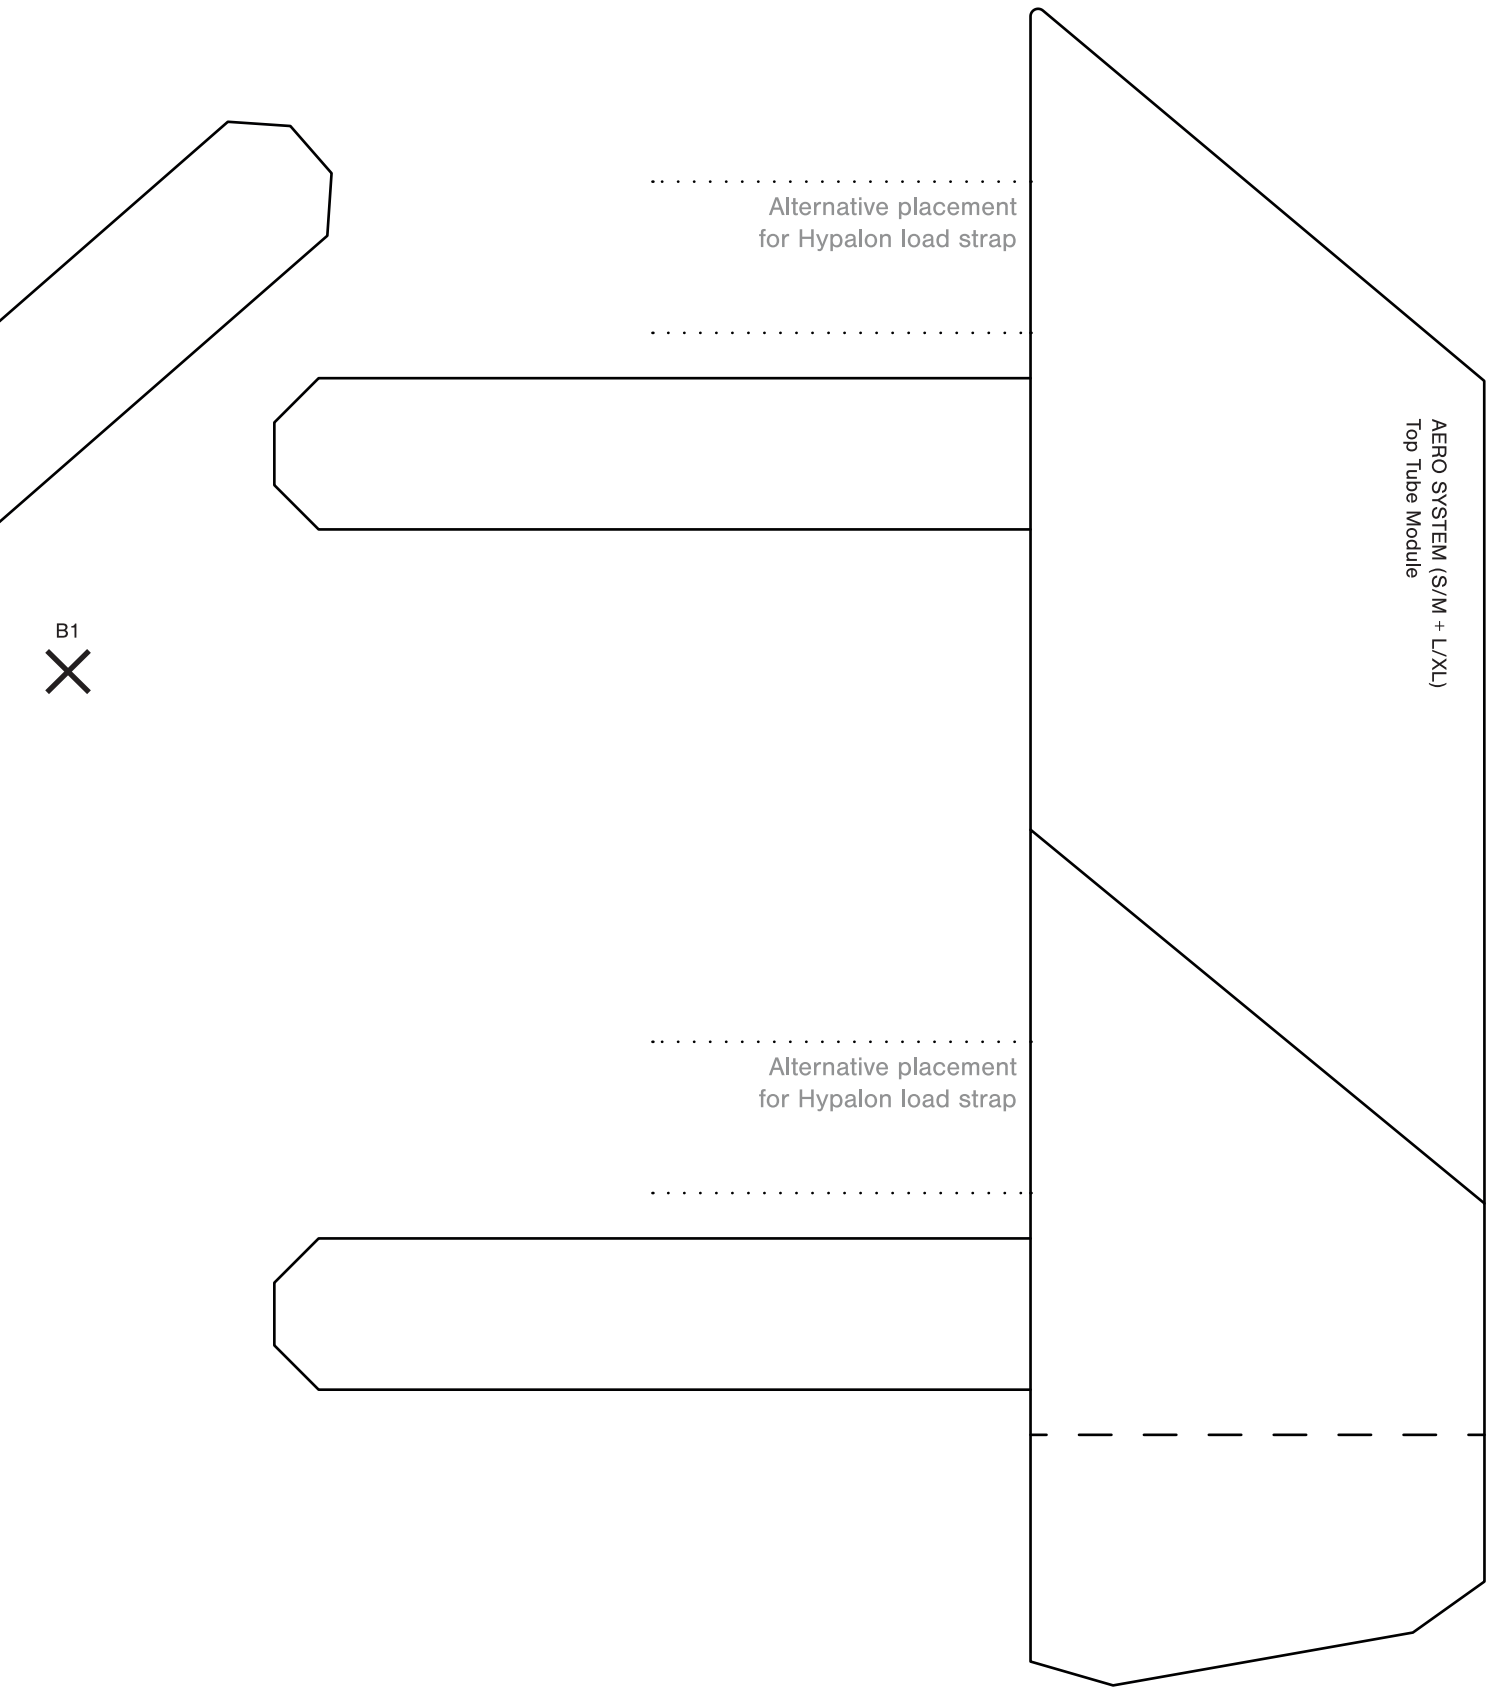

X Z1

Alternative placement span
for Hypalon load strap

AERO SYSTEM (S/M)
Frame Module

A2
X

AERO SYSTEM (S/M)
Frame Module - Inner part

